



## Roller Guide Wire Fitting & Operating Instructions

■■■■ LOUVOLITE

## Roller Guide Wire Fitting & Operating Instructions


Carefully unwrap the roller blind and its associated brackets.

### Fitting the brackets.

To work out the distance required between each bracket you will need to first measure the fabric width, e.g 1500mm.


Add to this an allowance for the control and idle end of 35mm, e.g = 1535mm.

1535mm would be the measurement from the outside of one bracket to the outside of the other bracket.

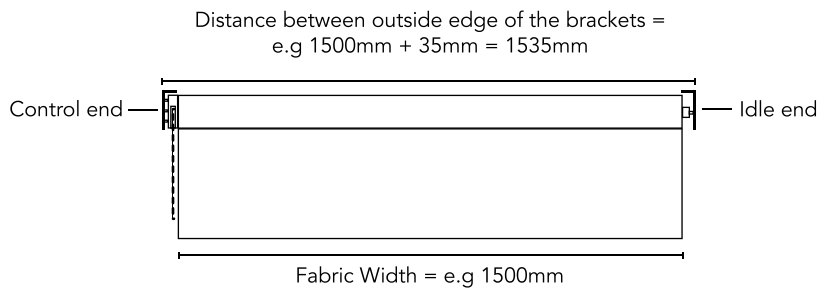

Use this figure to position the outside of your brackets accordingly whether inside of the recess or outside of the recess


Mark the hole positions before drilling and plugging if necessary. Use two screws in each bracket ensuring that the brackets are level. Remember to allow room for the blind to clear any obstacles when deployed, e.g. door or window handles.

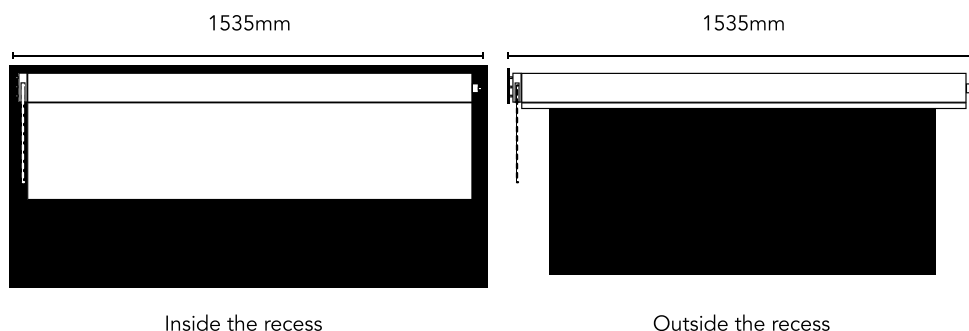

### Fixing the guide wire bracket (R8166/88) to the roller blind bracket

These brackets are universal for left hand or right hand, face fix or top fix - to suit the roller blind brackets and they should be fitted with the screws supplied.

#### Universal Guide Wire Bracket

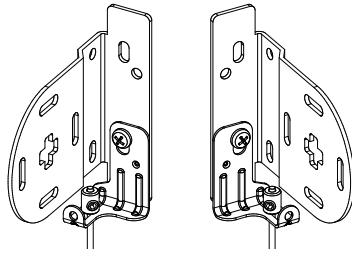


#### Face fixing

The guide wire bracket is fixed onto the face and will locate and fix into the base hole of the roller blind bracket - not the slot - on both sides with the supplied fixing screws.


#### Top Fixing

The guide wire bracket is fixed to the back face of the roller blind bracket. This will then locate and fix into the back hole of the roller blind bracket (not the slot) on both sides with the appropriate fixing screw.

#### Face Fix - Right Hand Bracket

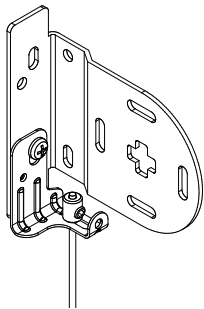

#### Top Fix - Right Hand Bracket

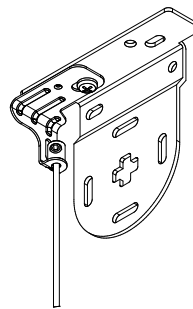


An allowance is required for the bracket to be fixed away from the back of the recess. This is dependant on what system is to be used:

System 32 - Allow 10mm

System 40 - No allowance

System 45 - Allow 5mm

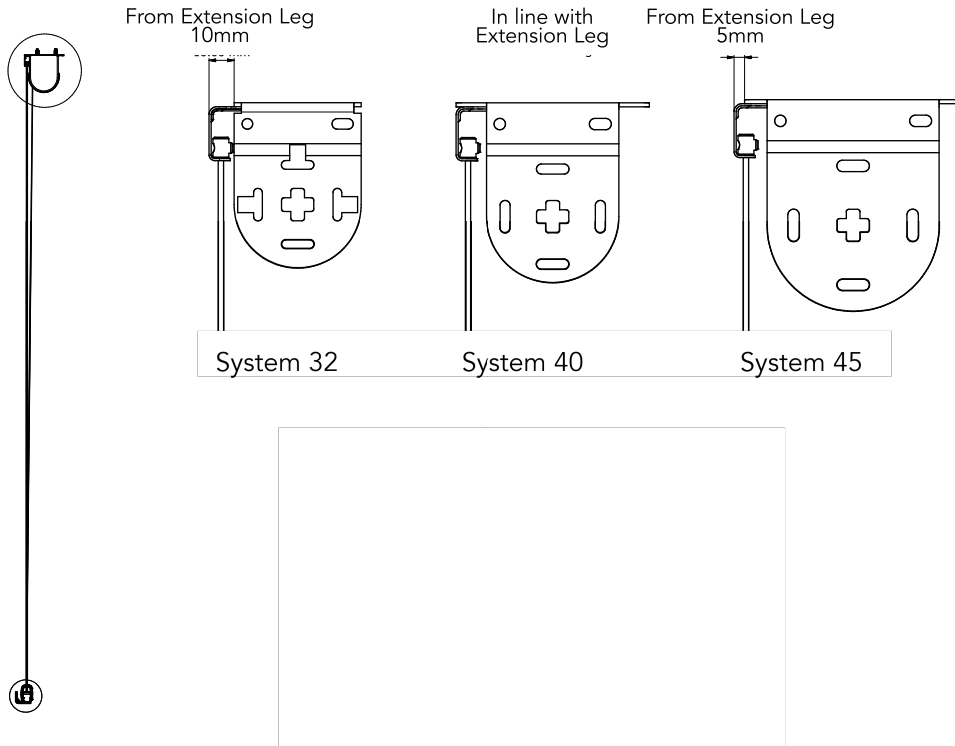

**Fitting the Guide wire and blind**


Attach a barrel clamp (R8190) to one end of an appropriate length of guide wire. Feed it from the top and down through the hole in the base of the guide wire brackets.



Place the roller blind into its brackets and deploy it to the bottom position.

Feed the wire through the end cap slot and down through the top cover. Attach a barrel clamp over the guide wire and pull taught to suit the drop. Tighten the barrel clamp and cut off the excess wire. Slide fit the top cover over the base plate.

#### Base Plate and Covers

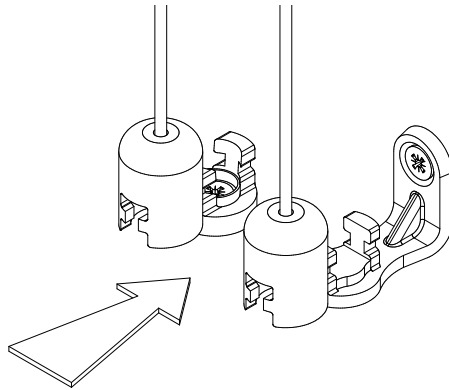

Place and align the base plate and cover into the end caps and mark the correct position where it has to be fixed - this could be face or base fixed. Remove the top cover and then fasten the base plate with a No 6 screw.

Do this to both guide wires

Operate the blind up and down to check it operates correctly.