

intu[®]

BEADFIT

ROLLER

FITTING INSTRUCTIONS


INTU Bead Fit: Roller



1. To fit your INTU[®] Roller Blind you only require the special bracket fitting tool supplied with your order.



2. Fully unpack the blind and lay out all parts supplied.

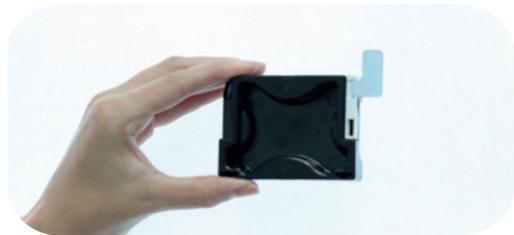

3. The brackets are fitted behind the window bead, all are handed. Locate one of the top brackets into the tool aperture and push.



4. Insert the bracket behind the rubber seal until the tool edge touches the bead at both top & side. Repeat for other side.




5. Similarly locate one of the bottom brackets in the tool.



6. Insert the bracket behind the rubber seal until the tool edge touches the bead at both bottom & side. Repeat for other side.



7. Locate the profile bottom endcap over the bottom bracket.

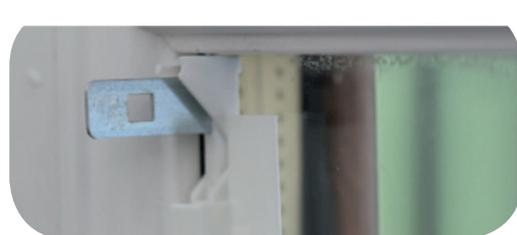

8. Apply pressure to click home the profile top endcap.

continued...



(continued)



9. Insert one side of fabric and corresponding bottombar end cap into side extrusion.



10. Slide the headrail onto top corner brackets on both sides.
N.B Do not push blind fully home onto brackets



11. On opposite side, tilt bottombar to open position and slide side extrusion over bottombar end cap and fabric ensuring both are within the fabric channel on the side extrusion



12. When the side extrusion is pushed all the way up and is in position, lock the bottom bar in place.




13. Engage the side extrusion bottom bracket into the bottom corner fixing bracket.



14. Position relevant number of recommended side extrusion clips according to the drop of the blind. Push home the extrusion clips with fitting tool.



15. The blind can now be pushed fully home onto brackets

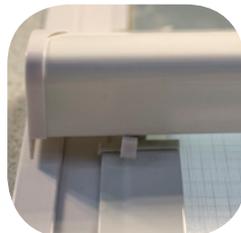

Blind Unlocked



Blind Locked

16. Ensure Locking arm is in the correct position after installation.