


CHANGING FROM SINGLE REMOTE TO MULTI-CHANNEL

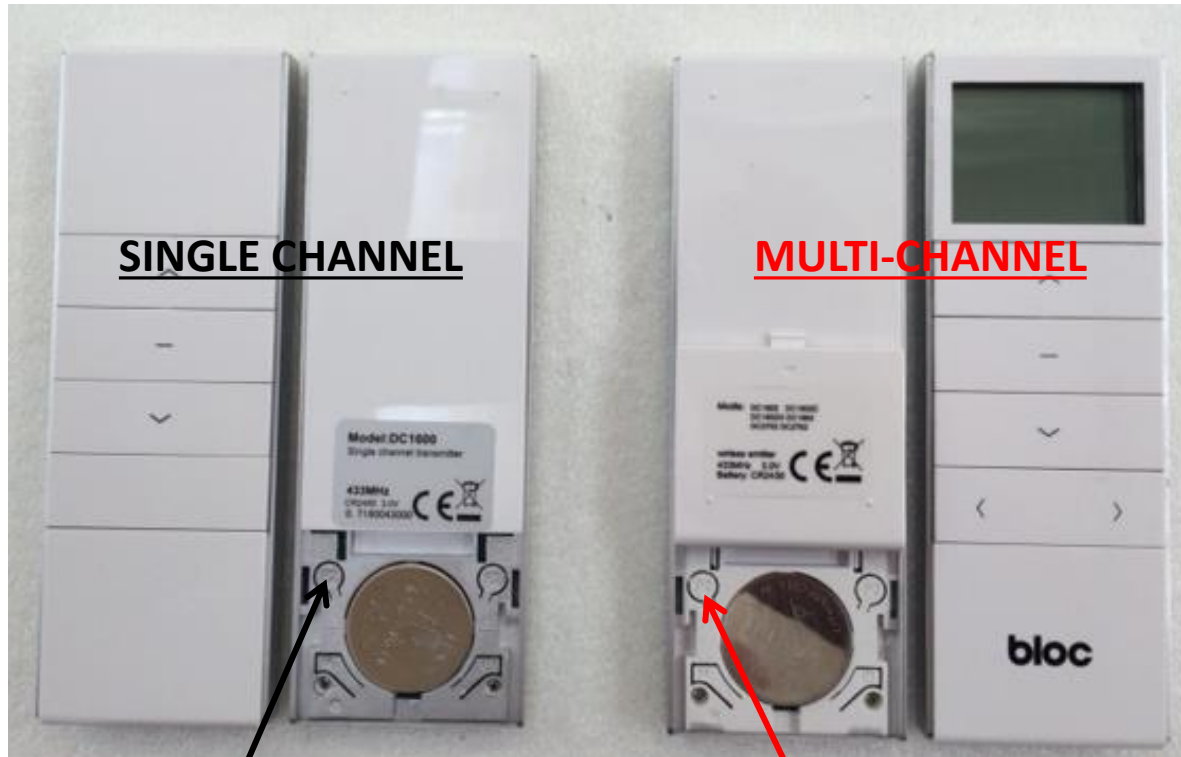

Take of battery covers off, make sure battery is inserted correctly.
Hold remotes towards the cassette.

Then on the Multi-channel select channel(i.e. 1 – 15),

On the single channel **press P2 twice**. (Blind will jog after the first press only).

Then on the Multi-channel **press P2 once**, on the selected channel. (Blind will jog).

(Ps. you may have to do this several times only on the Multi-channel, too get it to jog)

Continue this procedure with additional blinds

To operate all blinds together, select **0** channel on the remote.

(Ps. as all blinds are added to the multi-channel remote, Channel **0** is automatically updated to include all blinds added)

