



CASSETTE SYSTEMS

Fitting & Operating Instructions

Carefully unwrap the blind and its associated brackets.
There are two bracket options for cassette blinds, face fix and top fix.

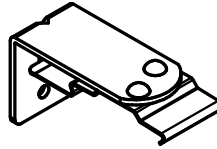

Face fix bracket

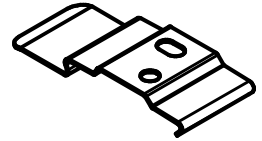


Top fix bracket


Fitting the brackets

For a blind up to 1 metre wide attach two brackets fitted approximately 75mm (3") from each end of the blind. Any intermediate brackets should be spaced evenly between these and as a general rule:


Up to 1m = 2 brackets.
1m to 2m = 3 brackets.
2m to 3m = 4 brackets.
Over 3m = 5 brackets.

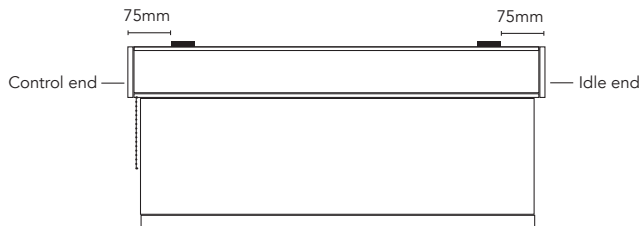

The bracket release lip on the bracket must face the back of the blind.

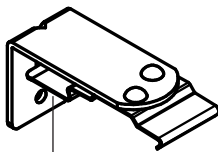

Release lip

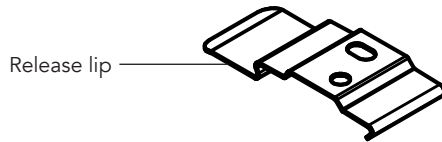


Release lip


Mark the hole positions before drilling and plugging if necessary. Use two screws in each bracket ensuring that the brackets are level. Remember to allow room for the blind to clear any obstacles when deployed, e.g. door or window handles.

FITTING THE CASSETTE

 Once all the brackets are in place offer the blind to the brackets. With the cassette tilted away from you locate the front lip into the bracket and push upwards to click the cassette into the back lip of the bracket.



Front lip

 

Front lip

Louvolute Cassette
Fitting and Operating Instructions

CHILD SAFETY

Unless your blind is motorised, your blind will be supplied with either Easybreak® connectors attached to the operating chain, or a cord tidy that will need to be fitted to the wall.

Easybreak® System

Two Easybreak® connectors are connected to the operating chain 200mm apart. This ensures that at least one of them will be in the vertical position ensuring they perform as required.

If excessive weight is applied within the loop an Easybreak® connector will break apart.

If an Easybreak® connector comes apart then it will need to be re-connected.

To re-connect, check the Easybreak® connector for damage. If undamaged, re-connect the chain by inserting the last ball on the end of the chain into the larger hole of the connector and push it into place.

Tensioned System using cord tidy.

If the blind is fitted with a continuous loop chain then a cord tidy will be attached to the chain. This must be fitted to the wall as follows:

FITTING A SIDE FIX CORD TIDY.

The cord tidy is a two piece device and will arrive with a disposable red tab fitted to it.

Remove the disposable red tab by disengaging it from the chain and then pull out the disposable red tab.


Position the cord tidy to the wall at the furthest distance below the roller tube adding appropriate tension to the chain and mark its location.

Split the cord tidy and mark the remaining offset hole position before drilling and plugging both location holes if necessary.

Screw into the offset hole to fix the back piece of the cord tidy to the wall.


Split the cord tidy and mark the remaining offset hole position before drilling and plugging both location holes if necessary.

Screw into the offset hole to fix the back piece of the cord tidy to the wall.



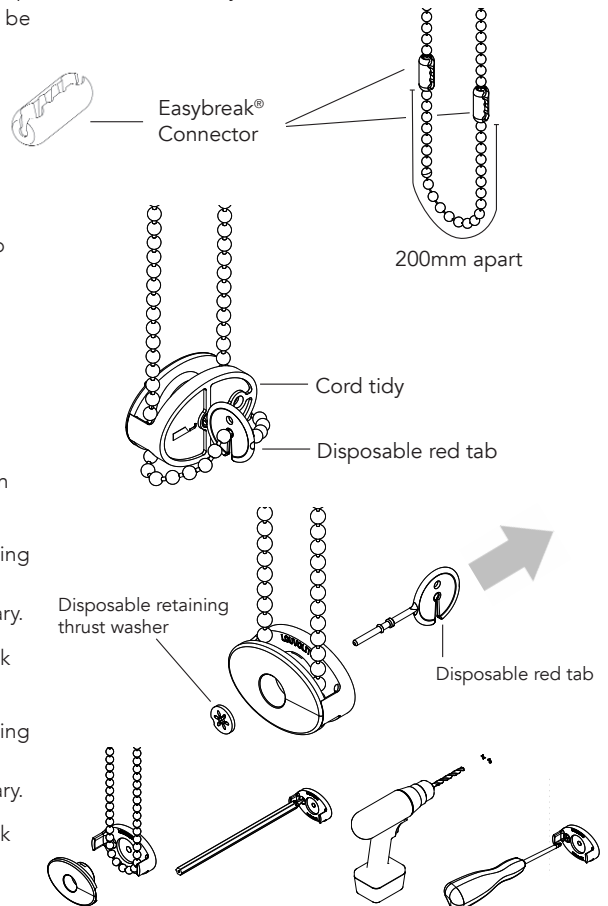


Louvrite Cassette Fitting and Operating Instructions

Re-assemble the cord tidy with the chain and fix it in previously marked position with a screw through the centre hole.

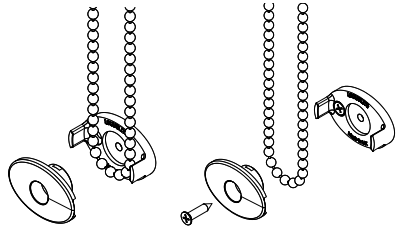


Push fit a cover cap over the screw hole opening.

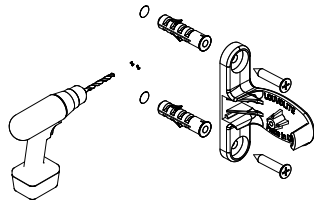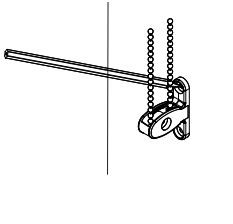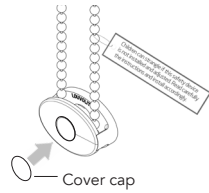


FITTING A FACE FIX CORD TIDY.

Position the face fix cord tidy to the wall at the furthest distance below the headrail adding appropriate tension to the chain and mark its location.

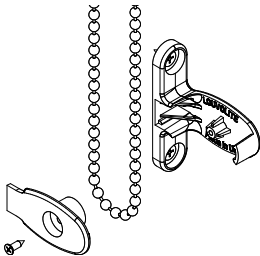

Attach the cord cover plate with the screw provided.

Mark the remaining hole position before drilling and plugging both location holes if necessary.

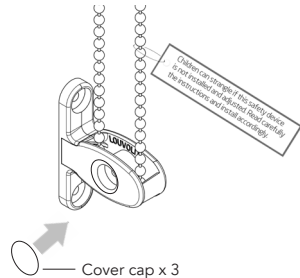

Push fit a cover cap over the screw hole opening.


OPERATING THE BLIND.

In order to lower the blind, pull the rearmost length of chain downwards with a smooth and steady pressure. To roll the blind up do the same on the front length of chain.

For a reverse roll blind the opposite is true, to lower use the front chain and to raise, use the rear chain.

Child Safety - BS EN 13120 Guidelines for Corded Blinds

Tensioned System with Cord Tidy

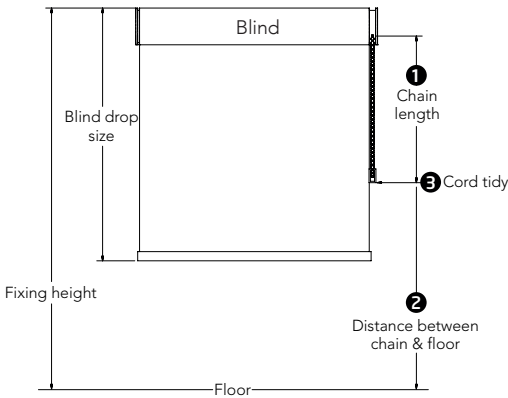


- 1 **If fixing height is unknown**
 - Blind drop \leq 2.5 metres, the chain length must be \leq 1 metre.
 - Blind drop $>$ 2.5 metres, the chain length must be drop of blind minus 1.5 metres.
- 2 **If fixing height known**

All blind drop sizes, distance between floor and bottom of chain must be greater than 1.5 metres.
- 3 **Cord tidy**

Affix a cord tidy to the wall at the maximum distance possible from the blind control mechanism ensuring all operating cords are taut (chain no more than 50mm apart at entry/exit of cord tidy).

Breakaway Connector System

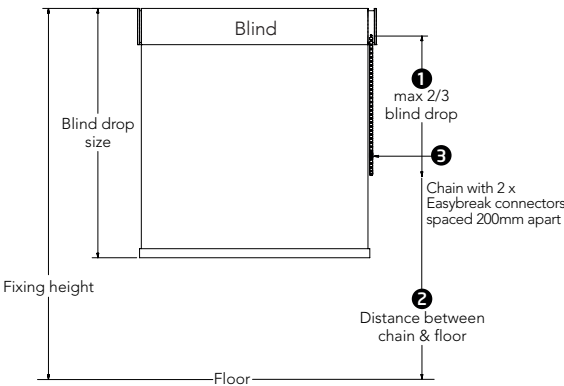

- 1 **If fixing height unknown**
 - Blind drop \leq 2.5 metres, the chain length must be max 2/3 blind drop.
 - Blind drop $>$ 2.5 metres, the chain length must be max 2/3 blind drop.
- 2 **If fixing height known**


All blind drop sizes, distance between floor and bottom of chain must be greater than 0.6 metres.
- 3 **Chain must be fitted with 2 x Easybreak connectors 200mm apart**

Will break apart when excessive force is exerted on the chain.

NOTE TO INSTALLER: Please ensure general child safety warning tag is fitted on the product.

WARNING

Young children can be strangled by loops in pull cords, chains, tapes and inner cords that operate the product. To avoid strangulation and entanglement, keep cords out of the reach of young children. Cords may become wrapped around a child's neck. Move beds, cots and furniture away from window covering cords. Do not tie cords together. Make sure cords do not twist and create a loop.

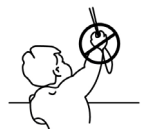

Visit the Louvolite website to view the links to all of our assembly instructional videos.

