



newblinds.co.uk

Roller Insect Screens - Measuring Guide

You will need to decide whether it is best to measure "Exact Blind Size" or "Recess Size"

Recess size



You should follow these instructions if:

- You are installing your screens inside of a recess.
- You would like us to make the manufacturers recommended deductions so that the screen fits within this recess perfectly.

Measure the width of the recess from wall to wall in 3 places, particularly at the top. Note down the shortest measurement.


Measure the drop from the top of the recess to the window sill in 3 places. Note down the shortest measurement

We will make the necessary deductions so that your screen will fit perfectly into the recess.

Installation Note:

- Even if you are installing your screen within a recess, where possible we would always recommend face fixing your side channels against the window frame.

Exact Blind Size

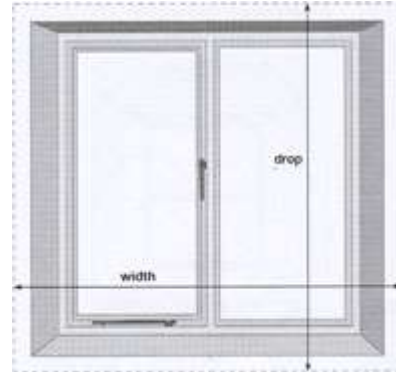

You should follow these instructions if you:

- Are installing your screen outside of the recess.
- Are fitting your screen within a recess but want to make your own deductions.

Measure the **screen width** of where you'd like your screen to be.

Measure the screen drop: From the top of where you want your screen to be to the bottom.

If fixing outside of the recess, you will need to consider that:

- side channels are 30mm width each, so 60mm in total.
- Cassette is 51mm from top to bottom.
- U-shaped Magnetic Profile (optional) is 14mm from top to bottom

So, as a minimum, you will need to add these sizes onto the size of your recess.

We will not make any further deductions and will make the blind exactly to your measurements.