



1. Fitting tools required include scissors and Bracket Insertion Tool (TP483)



2. Position top fixing bracket into the purpose made slot in the Bracket Insertion Tool.



3. Position bracket behind rubber bead and carefully push the metal legs behind the bead.



4. Check bracket is squarely secured. Repeat both sides.



5. Position bottom fixing bracket into the purpose made slot in the Bracket Insertion Tool.



6. Position bracket behind rubber bead and carefully push the metal leg behind the bead.



7. Check bracket is vertically secured. Repeat both sides.



8. Place the side profile* against the side frame with flat face towards the glass and the notch to the bottom.



9. Slide the top edge into the slot of the bracket. Push profile fully into position.




10. Slide bottom slot of profile over the bottom bracket. Repeat both sides.



11. At the appropriate position(s) on each side profile, fit retention clips (long side profiles only).



12. Press home using the insertion tool. Fully located the clip will sit over the side profile.

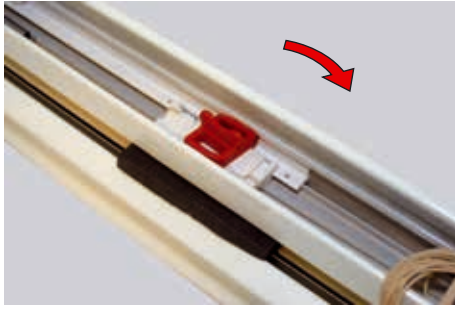

13. Remove transit packing piece by rotating clockwise (Venetian blinds only).



14. With rubber bands in place, align the headrail end cap slot with bracket arms.



15. Ensure headrail is correctly aligned and firmly press home. Snip off rubber bands and lower the slats fully.



16. With cord at bottom of bracket, slide onto clip. Repeat both sides.



17. To align the bottomrail horizontally, simply pull it into the position desired. It will stay in position under tension from the cords.

INTU® Privacy

The steps required to fit INTU® Privacy blinds are the same as for INTU® Venetian up to step 15. From then on, follow the instructions below.



16. With cords at bottom of bracket, slide onto clip. Repeat both sides. Ensure the front cord sits within the notch of the bottombar endcap.



17. To align the bottomrail horizontally, simply pull it into the position desired. It will stay in position under tension from the cords.

INTU® Pleated & Cellular

The steps required to fit INTU® Pleated or Duette® blinds are the same as for INTU® Venetian up to step 15. From then on, follow the instructions below.



16. With cord at bottom of bracket, slide onto clip. Repeat both sides.



17. To align the bottomrail horizontally, simply pull it into the position desired. It will stay in position under tension from the cords.

18. Final Step

For all Beadfit Blinds



Check the blind operation, raise/lower and open/close is satisfactory.