

Junior RU 30 RTS



COMMISSIONING QUICK GUIDE

1) Connect battery tube to motor

Insert AA batteries as illustration on side of tube.

Connect the motor to the battery




2) Pairing the Handset

Access the PROG button on the inside of the Situo handset.

Press **Briefly and release** the PROG button.

The blind will jog once.

PROG

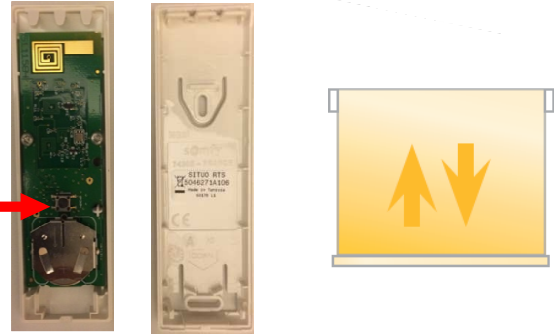


The motor end limits and rotation direction are pre set.


3) Change Rotation Direction

If required - **Move away from end limits.**

Press **UP** and **DOWN** buttons simultaneously, until the blind jogs.

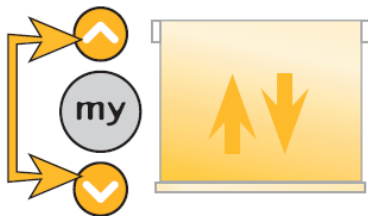


Press and hold the **my** button until the blind jogs. The rotation direction is now reversed.

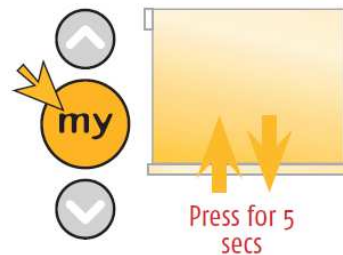


4) Adjust Upper End Limit

Press the **UP** button and send the blind to the upper limit position

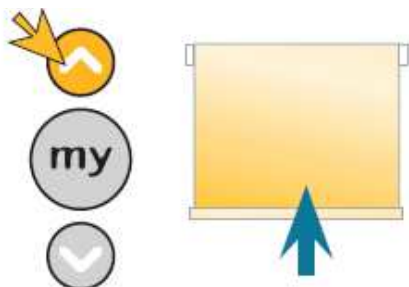


Press and hold the **UP** and **DOWN** buttons until the blind jogs

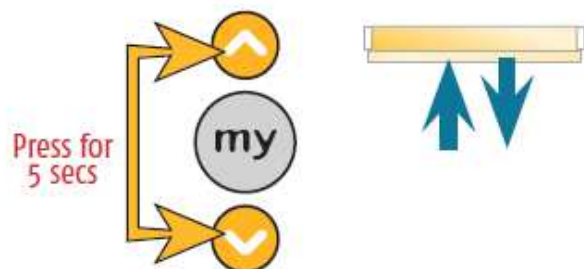


4) Adjust Upper End Limit (Cont.)

Adjust to the correct position using either the Up or Down button.

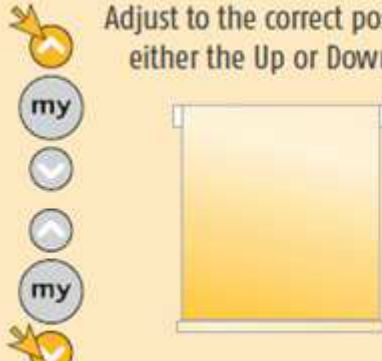


Press and hold the Stop button until the product Shunts.




New limit position set ✓

5) Adjust Lower End Limit


Press the Down button and send the product to the lower limit position.

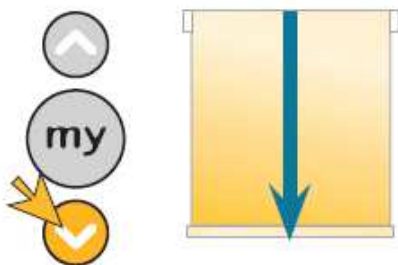


Press and hold the Up and Down buttons until the product Shunts.

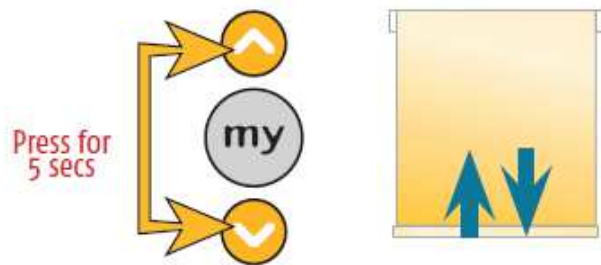

Adjust to the correct position using either the Up or Down button.

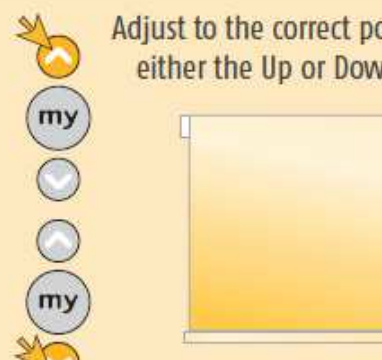


Press and hold the Stop button until the product Shunts.

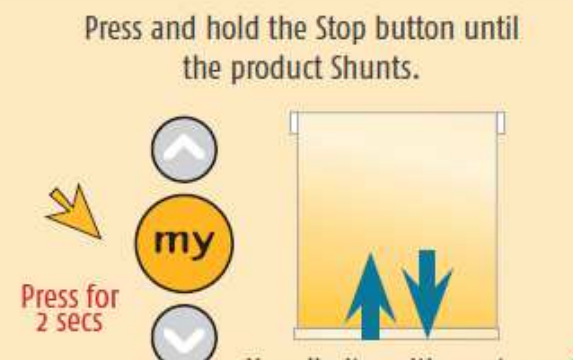

New limit position set ✓


6) Copy control to another handset

Press the PROG button on the back of the Situø.

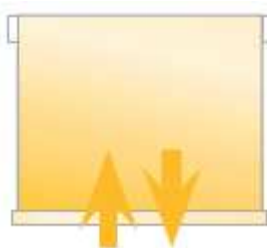

Blinds jogs once.

Very quickly press the PROG button on the back of the new handset

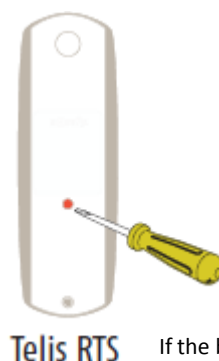

Blinds jogs once.

If the blind takes a short time and does 2 jogs then this was not done quickly enough and the reset process has been entered. If this happens complete reset process and start again.

7) Reset to Factory Mode

To wipe limit settings and remove all transmitters:

